 
Timberland 48°

2H / 2HDATE / 3H / 3HDATE INSTRUCTION MANUAL



position I.

Normal position, watch runs Time setting: Set to the correct time. Push crown back to position I. - Quick change of the date ((5 anticlockwise) DATE MODELS * do not set the date between 9:00 p.m. and 3:00 a.m.