



9238 / 1970
INSTRUCTION MANUAL

C button (optional, not available in some models)


Quick correction of Day

press 2 times to advance one day

*Do not use this button between 22:00pm to 6:00am

A button

Quick correction of Date

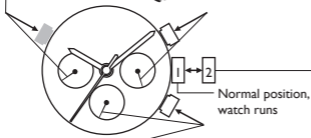

B button

Quick correction of 2nd time zone

*When using this button to set the 2nd time zone, the centre minute hand must be set to between 55th and 05th minute at any hour.

Day setting:

to rotate the hour and minute hands clockwise.

Note :The day is changed during the period from about 0:00 AM to about 4:00 AM.

Time setting:

To rotate the hour and minute hands to show the correct time. Push crown back to position 1.

*24hours hand will move accordingly.