

# Timberland 🎕

VD53 INSTRUCTION MANUAL

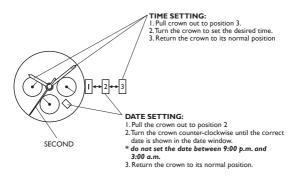

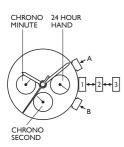

# CHRONOGRAPH OPERATION:

The chronograph can measure up to I hours in one second increments. Pusher A starts and stops the chrono operation. Pusher B is for reset.

# To measure elapsed or split time:

- I. PRESS pusher A to start timing
- PRESS pusher B to stop timing. The stopwatch continues to count seconds
- elapsed but the hands do not move.

  3. PRESS pusher B again to resume timing.
- The hands move quickly to indicate elapsed time and continue counting.

NOTE: The hour, minute and second hands on the watch will continue to indicate the correct time while using the stopwatch.

crown to its normal position.

hands.

24-HOUR SUB-DIAL SETTING: The 24-hour hand moves correspondingly with the hour and minute hands. When setting the time be sure to check that the 24-hour hand is set properly.

2. Press A to reset the chronograph second hand to 7ero 3. Press B to reset the chronograph minute and hour 4 Reset the watch to the current time and return the

ADJUSTING THE CHRONOGRAPH: I. Pull the crown to position 3.